

Allflex RS420 Manual

#### **Copyright Information**

© 1978-2017, Farmdata Limited Westertown Rothienorman Aberdeenshire AB51 8US

The information contained in this manual and the accompanying software program are copyrighted and all rights are reserved by Farmdata Ltd.

Farmdata Ltd reserve the right to make periodic modifications of this product without the obligation to notify any person or entity of such revision. Copying, duplicating, selling or otherwise distributing any part of this product without the prior written consent of an authorised representative of Farmdata Ltd are prohibited.

Information contained in this document is subject to change without notice and does not represent a commitment on the part of Farmdata Ltd. The software described in this manual is furnished under a license agreement. The software may be used or copied only in accordance with the terms of this agreement.

### **Limitations of Liability**

In no event will Farmdata Ltd or any other person involved in the creation, production or distribution of the Farmdata software be liable to you on account of any claim for any damages, including any lost profits, lost savings, or other special, incidental, consequential, or exemplary damages, including but not limited to any damages assessed against or paid by you to any third party, arising out of the use, inability to use, quality or performance of such Farmdata software and user manual, even if Farmdata Ltd or any such other person or entity has been advised of the possibility of such damages, or for any claim by any other party. In addition, Farmdata Ltd or any other person involved in the creation, production, or distribution of Farmdata software shall not be liable for any claim by you or any other party for damages arising out of the use, inability to use quality or performance of such Farmdata software and user manual, based upon principles of contract warranty, negligence, strict liability for the negligence of Farmdata Ltd or other tort, branch of any statutory duty, principles of indemnity or contribution, the failure of any remedy to achieve its essential purpose, or otherwise.

This does not affect your statutory rights.





# Contents

2
3
4
5
5
6
6
7

## Sheepdata – Allflex RS420

The object of this document is to explain the link and operation of the Allflex RS420 Reader and Sheepdata. It is divided into three sections, each explained in a chapter.

- 1. Sheepdata Setup
- 2. Upload from Reader
- 3. Using Readings in Occurrences

It is intended to be a guide to the main procedures you may wish to use with Sheepdata.

For detailed operation of the Allflex RS420 reader please use in conjunction with the Allflex manual.





When Sheepdata has the EID Module enabled the menu options below become available. These enable communication with a range of readers.

The RS420 communicates through a serial com port or a USB port. This port has be identified and set in Sheepdata. To find the com port:-



Right Click on the Computer Keyboards Icon on the screen or click on Mice and other pointing devices the Start button and right click Monitors Network adapters on the Computer Icon. a 🖤 Ports (COM & LPT) **Click Properties.** Communications Port (COM1) RS420 Communications Port (COM22) Processors Click Device Manager 📲 Sound, video and game controllers **Click on Ports** System devices Universal Serial Bus controllers Note the Com No. of the Western Digital NAS

RS420





8	Reader Setup		
	Setup	<u>W</u> eigher	1
	Manufacturer:	▼	
8	Reader:	Alflex RS420	
	Port:	COM22 -	
	Baud Rate:	9600 -	
	Reader ID:		
	<u>G</u> et Item	Set Item	Help

Manufacturer Set as Tagmaster.

Reader Set as Allflex RS420

Port. Select the port from the drop-down.

Baud Rate Set as 9600

Reader ID When "Set Item" is used the reader connection is tested.

Click "Set Item" to check the connection. Reader must be switched on.

The screen on the right indicates a successful connection.







### 2.1 Upload from Reader

8	Upload from Reader	-	×
Options			
Upload Tags:	Clear Tags:		
4	<u>S</u> tart <u>H</u> elp		

This transfers the information recorded on the RS420 back to the PC.

1 Upload Tags - Click Start to transfer data from the reader to the PC.

Upload	from Reader	×
The upload from the Re Is it ok to Clear the Read	ader was completed successfully.	
	<u>Y</u> es <u>N</u> o	

If you wish to clear the recorded data from the reader click Yes.

2 Clear Tags – Will clear the recorded data from the reader. Take care that you have transferred all the data you need before doing this.

The recordings are imported into a holding section of the program. They stay in this holding section until they are used in an occurrence routine.

To check or amend the data in the holding section go to Amend Read Animals.





## 3.1 Amend Read Animals

Items: All					~	New G	roup:	0	
Animals -						Q.	alactad:	Available:	Total
Type:	All	~	Location:	All			0	34	34
Da	ite	Elec	ctronic 1	lag	Group	Occuri	rence	Value	
01/12	2/2012	826	012345600	002	2	Other			^
01/12	2/2012	8260	012345600	0006	2	Other			
01/12	2/2012	8260	012345600	013	2	Other			
01/12	2/2012	8260	012345600	016	2	Other			
01/12	2/2012	8260	024422000	718	2	Other			
01/12	2/2012	8260	024422000	720	2	Other			
01/12	2/2012	8260	024422000	)724	2	Other			
01/12	2/2012	8260	024422000	748	2	Other			
01/12	2/2012	9820	000001071	1589	2	Other			
01/12	2/2012	9820	000001071	699	2	Other			
01/12	2/2012	9820	000152202	2768	2	Other			
16/01	/2013	8260	024422000	0706	4	Other			
16/01	/2013	8260	024422000	724	4	Other			
16/01	/2013	8260	024422000	744	4	Other			
16/01	/2013	8260	024422000	728	4	Other			~

Imported reader data can be checked here.

The recordings are shown in the order in which they were read.

The Group separates the lots as read on the reader.

Groups can be changed by selecting the required animals, changing the number in New Group and saving.

New Tag - Tags which are not recognised as already in the system are labelled as "New Tag".

Any errors or unwanted readings can be highlighted and deleted.

Numbers are removed from amend read animals when they are used in the relevant occurrence.





Occurrences recorded on the reader should be imported into the records in the appropriate occurrence routine.

nît -	Purchases – 🗆 🗙
Details	10/09/2012 v To: Users Form v Add.
Ser:	Female V Haulier: Animal Transport Co. V Add:
Bom:	2011  Vehicle No:
Breed:	Texel X V Add: Weight (Total): 0.00 - Invoice No:
From:	The Mart V Add: Price (Total): 0.00 🚖
Comment.	
Animals	Ewes: Lambs: Total:
Type. Reader	r V Location: Group 2 V 5 0 5
Ear Number	- Bom Sex Breed Include Official Tag
▶ 00002	01/01/20/1 Female TXLX VUK012345600002
00006/	01/01/2011 Female TXLX V UK012345600006 01/01/2011 Female TXLX V UK012345600016
00718	01/01/2011 Female TXLX V UK024422000718
* 00/44	01/01/2011 Female 1XLX V 0K024422000724
	Save Select Delete Refresh Exit Help

Go into the required  $\phi$  ccurrence.

Set the Details for this batch of tags.

Select Reader in Type. In Location you can select a Group from the reader.

The tags will be shown in the screen. Click Select to select all the animals. Remove the tick in include in any you don't want to record.

Click Save and the records will be updated.



